


## LIFTOMATIC MODEL 10-HT4W


### OPERATING INSTRUCTIONS

#### 1) Setting the clamping mechanism

First, adjust the nut/bolt arrangement on the back of the hand truck clamp (B) so that when the adjustment handle (A) is pulled toward the post, the clamp slides freely and does not bind.

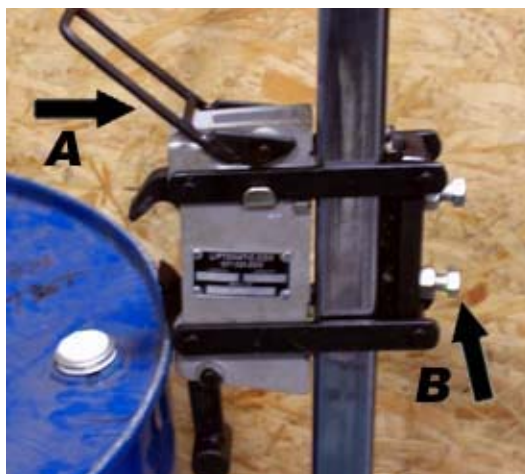

Second, place the hand truck in the vertical position alongside the drum. Pull the adjustment handle (A) and adjust the clamping mechanism up or down, so that the bottom of the lower jaw on the parrot-beak (C) rests on, or just barely above the top of the drum.

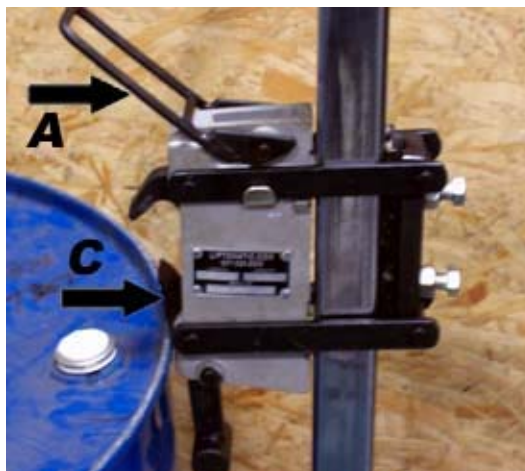

**Liftomatic Material Handling, Inc.**

700 Dartmouth Lane  
Buffalo Grove, IL 60089

Phone 847 325-2930  
Fax 847 325-2959  
Toll Free 800 837-6540


**2) Clamping the drum for pick-up and transport**

Place your foot on the foot-post (D) and your hands on the handle bars of the unit. Push your hands forward, allowing the wheels to roll back towards you, while keeping your foot on the post.



(NOTE- Keep the clamping mechanism from contacting the drum at this point or the clamping mechanism will slide out of position on the post) . Keep your foot on the foot-post!

With the housing tilted forward in this position, push the housing up against the drum, with the lower jaw (E), directly underneath the drum's top edge or chime.

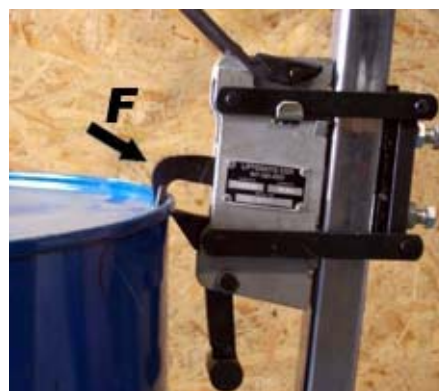

With the lower jaw under the drum chime or edge, maintain contact with the drum and push your foot forward until the cradle and wheels of the hand truck are back in the vertical position alongside the drum. The upper jaw (F) will now lock automatically, closing over the top chime of the drum.



## Liftomatic Material Handling, Inc.

700 Dartmouth Lane  
Buffalo Grove, IL 60089

Phone 847 325-2930  
Fax 847 325-2959  
Toll Free 800 837-6540

Now by using both upper and lower body (pull your hands back and push "out" with your foot on the foot-post), the drum can be broken over for transport.



To release the drum, set the drum down in the vertical position and let the wheels roll back toward you as in step # 2 above. The clamping mechanism will automatically release the drum.

**REMEMBER TO KEEP YOUR FOOT ON THE POST AT ALL TIMES WHEN ENGAGING AND DIS-ENGAGING THE DRUM!**

For additional information, please contact Liftomatic Technical Services at:

700 Dartmouth Lane  
Buffalo Grove, IL 60089  
Toll-Free: 800-837-6540  
Local : 847-325-2930  
Fax : 847-325-2959  
Email: [info@liftomatic.com](mailto:info@liftomatic.com)  
Web : [www.liftomatic.com](http://www.liftomatic.com)

10HT4WOPS/05  
TPB/WS © 2005, LMH, INC.